
1871 and 1874 Brake Vans

Thankyou for purchasing your Mannin models GWR Brake or Road Van. These are resin printed bodies and parts with laser cut floor and glazing. The axles are held in position with nuts and botts allowing easy adjustment and maintenance as well as replacement if you have and accident.






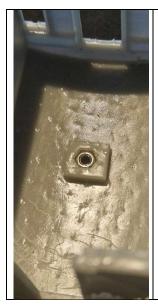

The chassis fits to the body and is held in place with the 50mm bolt which screws into the captive nut in the roof. Simply place the nut into the hexagon slot and glue the square retainer plate on top of it.





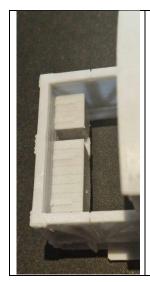

The tool box or sanding box, depending on which van you have is printed as part of the body if you have an open roof or is separate if the veranda has a roof to enable easier painting before fitting.

The holes in the body are for your handrail knobs and the holes or slots on the sole bar are to brass wire to be used for the hanger brackets on the step boards.





The step boards are handed as the hanger brackets were not evenly spaced!