
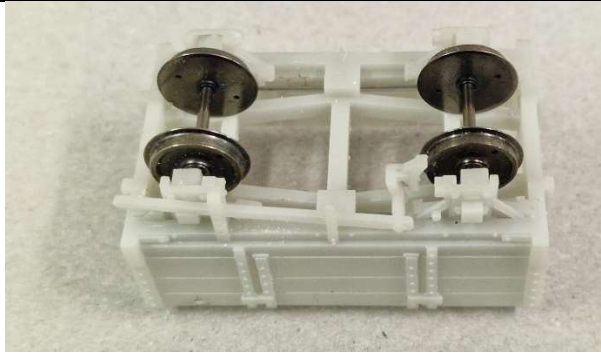


Thank you for buying your “Mannin Models” Skull & Skibbereen Vans and Wagons. You might find that some parts will need the “pox marks” from the supports during the 3d printing need rubbing down. On these models this will mostly be on the top edges. The bearings are inside the blue tape Always use a primer before your main paint. We use spray primer from that well known car shop.

Trim the wire so it fits between the buffer beams.

The Bearing spacers slide onto the wire by passing the wire through the small hole. The supplied brass bearings fit into the larger hole.

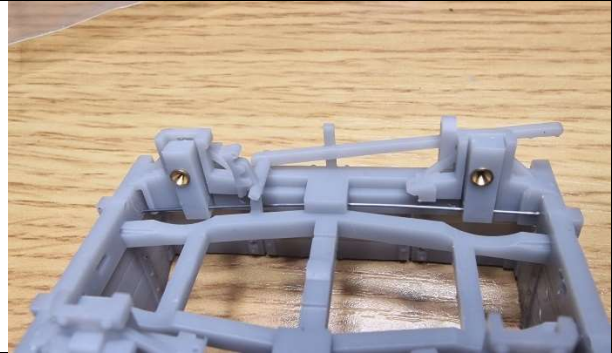

The wheels then pop into place like any other rolling stock, although if you slide the bearing spacers out a little while attached to the wire the wheels are easier to fit, and you will not put any strain on the axles. 14mm wheels are about scale for these.

Mannin Models are Made by Didcot Design and Prototyping Ltd